
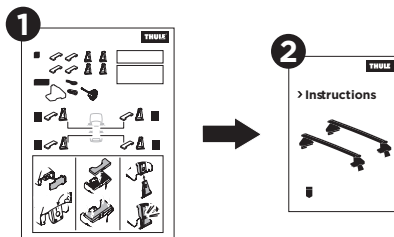


2

THULE
SWEDEN

> Instructions

Thule Evo Clamp
710500

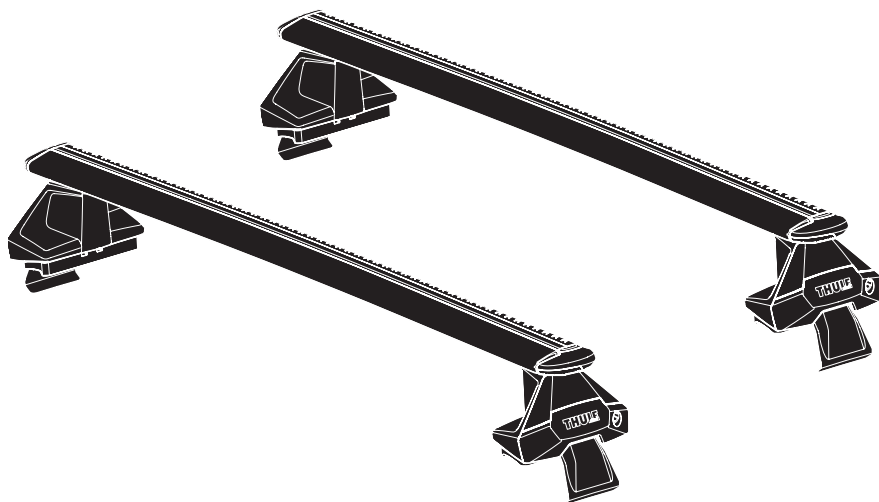

EN Roof mounted load carrier
DE Lastenträger zur Dachmontage
FR Barre de toit
NL Dakdrager
IT Barra portatutto da installare sul tetto
ES Portaequipajes de techo
PT Barra para montagem no tejadilho
SV Takmonterad lasthållare
DK Tagmonteret lastholder
NO Takmontert lasteholder
FI Katolle asennettava teline
ET Katusele paigaldatav katuseraam
LV Uz jumta uzstādāms kravas turētājs
LT Ant stogo tvirtinamas krovinų laikiklis
PL Uchwyt na bagażnik bazowy montowany na dachu
RU Багажник на крышу
UK Багажник для даху
BG Багажник, монтиран върху покрива
CS Nosič pro montáž na střechu
SK Strešný nosič
SL Nosilec za strešni prtljajnik
HR/BIH Krovni nosač tereta

RO Suport încărcătură montat pe acoperiș
HU Tetőre szerelhető csomagszállító
EL Στάθρα οροφής για μεταφορά φορτίου
TR Araç üstüne bağlanan yük taşıyıcı

מנשא מטען לגג הארבע
 حامل نقل مثبت على السقف

ZH 頂置行李架
JA ルーフマウント型ロードキャリア
KO 루프 장착 화물 캐리어
TH โครงยึดของบรรทุกแบบติดตั้งบนหลังคา

CITY CRASH

Complies with ISO norm


ISO 11154-E



Instructions




Safety






Max 130 km/h
80 Mph



Your Key-Number

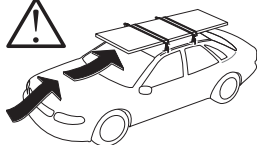

80 km/h
50 Mph

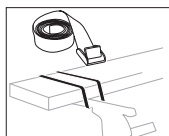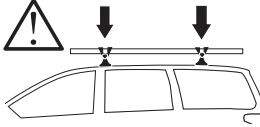


> Mounting Tutorial Thule Evo Clamp

THULE
SWEDEN



thule.com

1
KIT

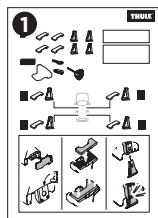

+

2
FOOT PACK




x4



x1







x2



3 Nm

x1

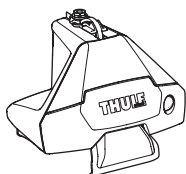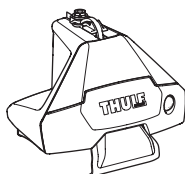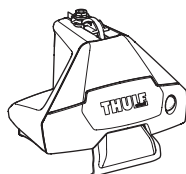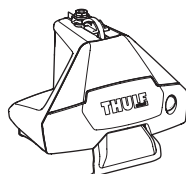


BAR


3




THULE
WingBar Evo



x2



x2



x2




x2




x2




THULE
WingBar




x2



x2



x2




x2



x2




THULE
SlideBar Evo



x2



x2



x2




x1




x2




THULE
ProBar Evo



x2



x2



x2



23 mm



17 mm

x4


x4

x1

x2



THULE
SquareBar Evo




x2



x4

i

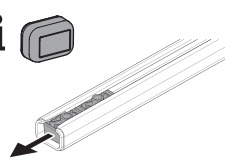





THULE
WingBar Evo




A

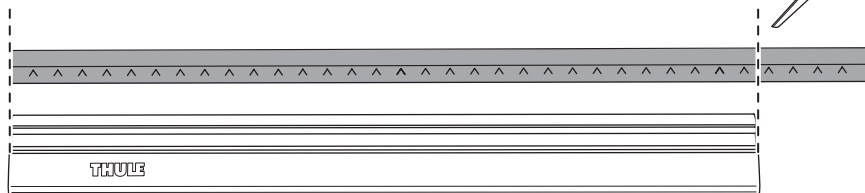





B

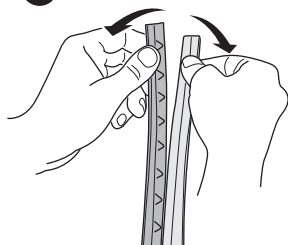


C

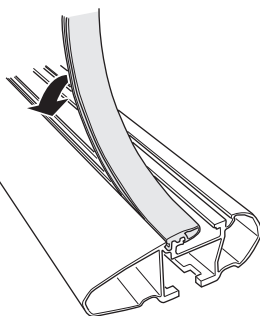

D

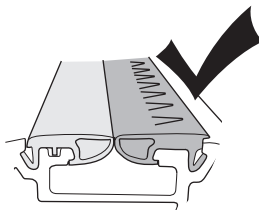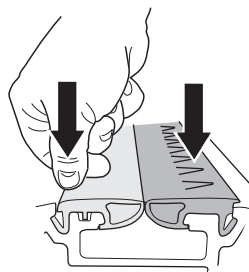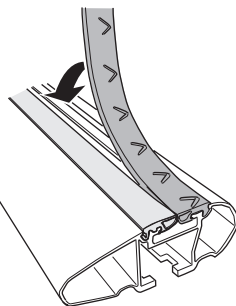

x2

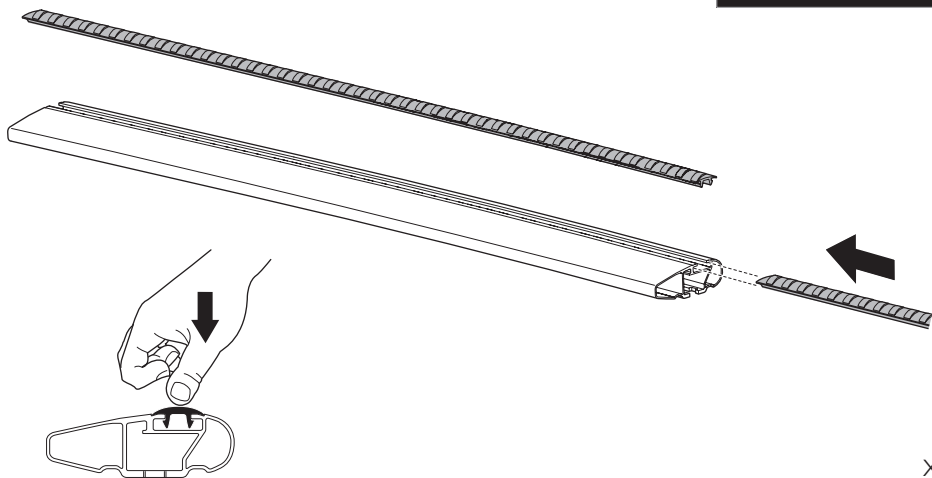

5




A



B





C

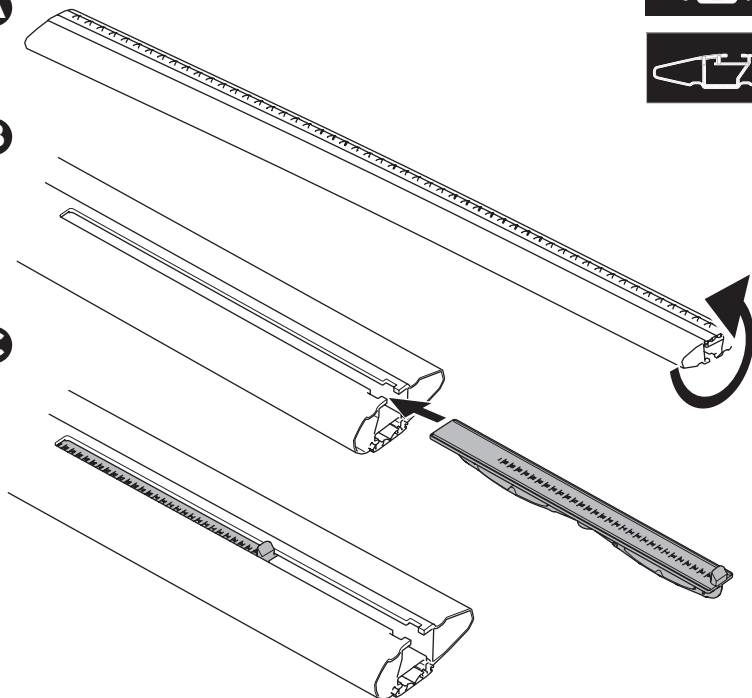

x4


6

1 KIT + **2** FOOT PACK + BAR **3**

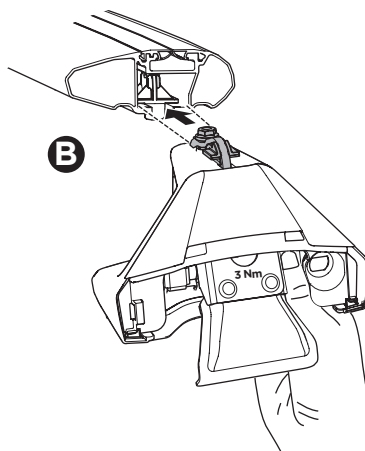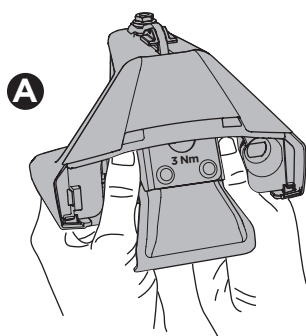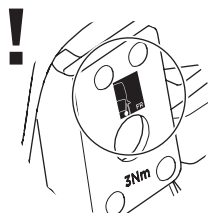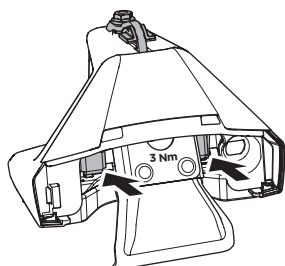


x4

7

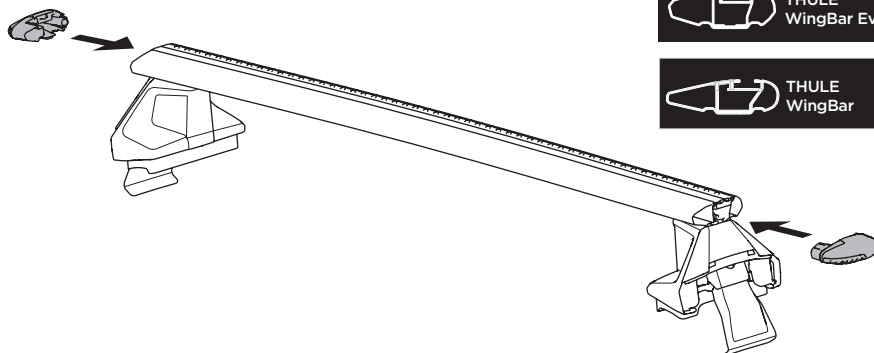


x2

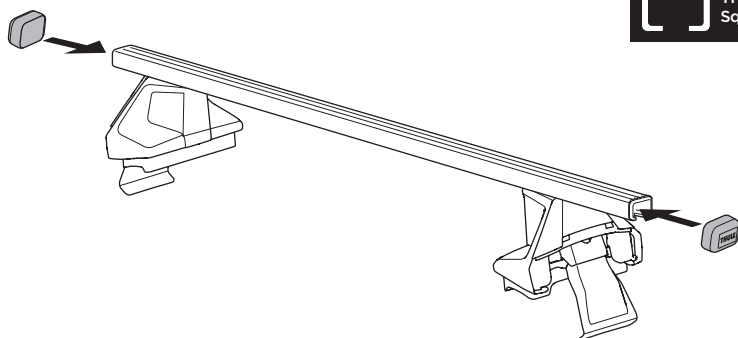

THULE
SquareBar Evo



x2

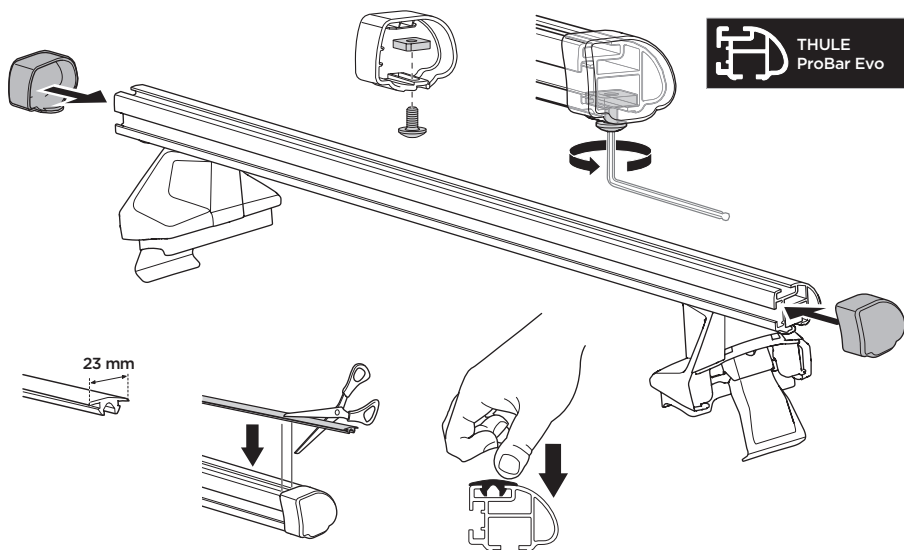



THULE
ProBar Evo

x2



THULE
SlideBar Evo

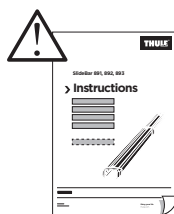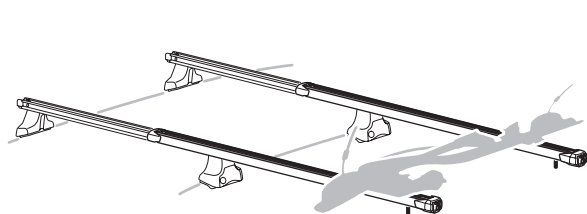



8

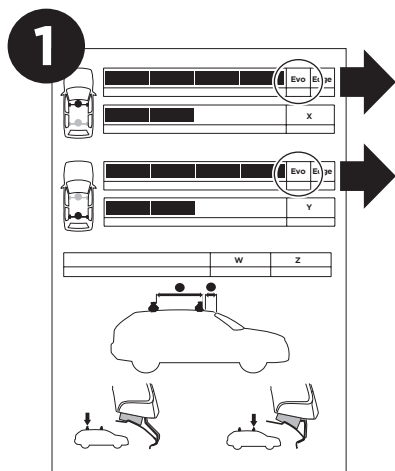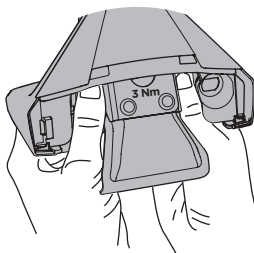


X / Y Scale

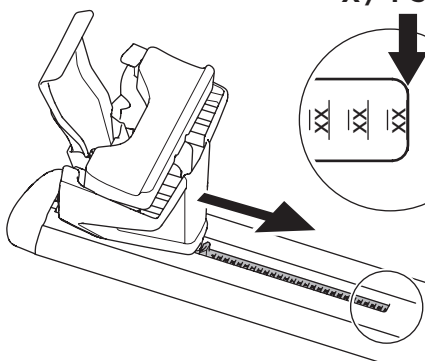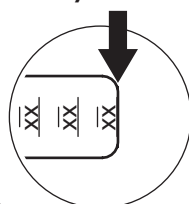




x4

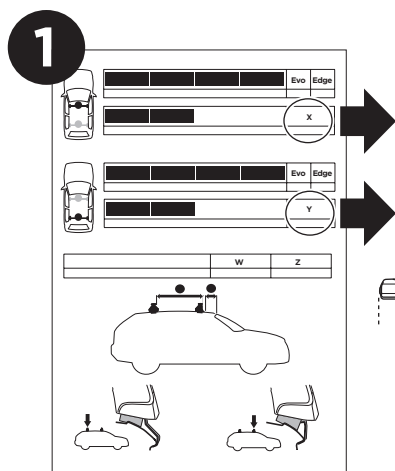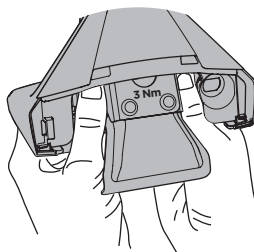

X / Y (mm / inch)

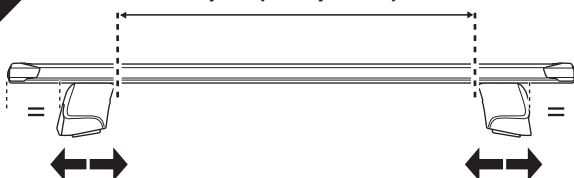


x2

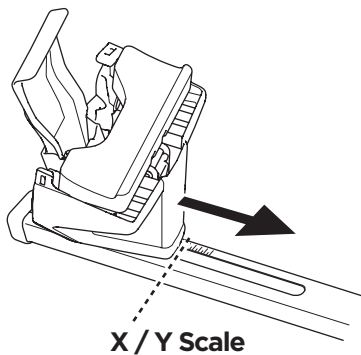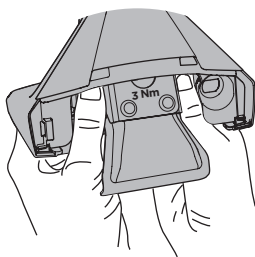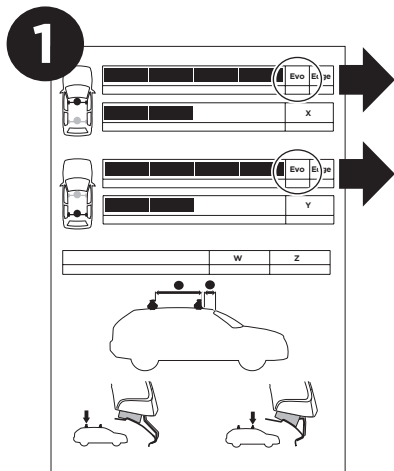


x4


9

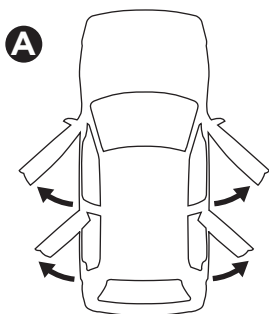





B

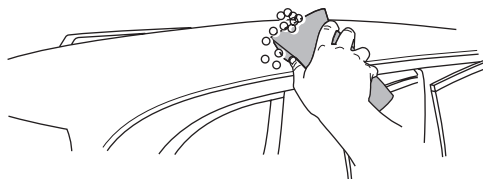



C

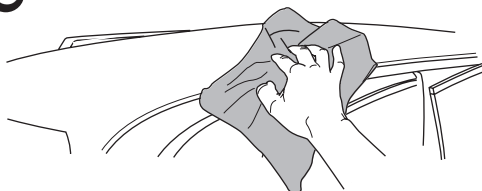





10

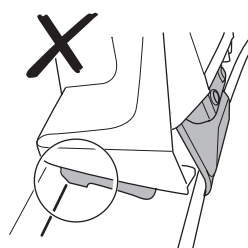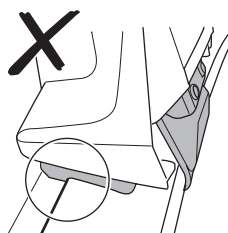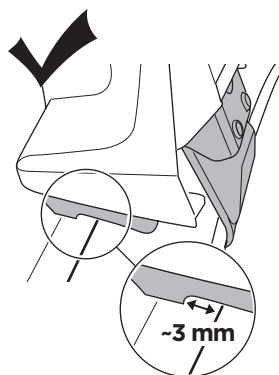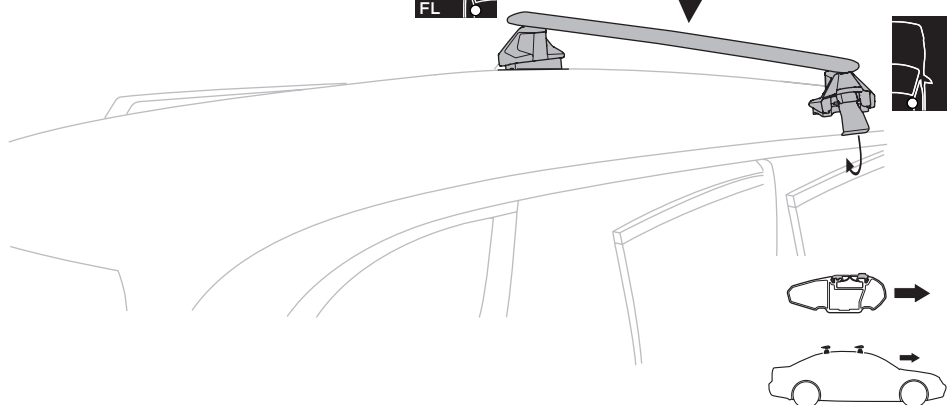



1

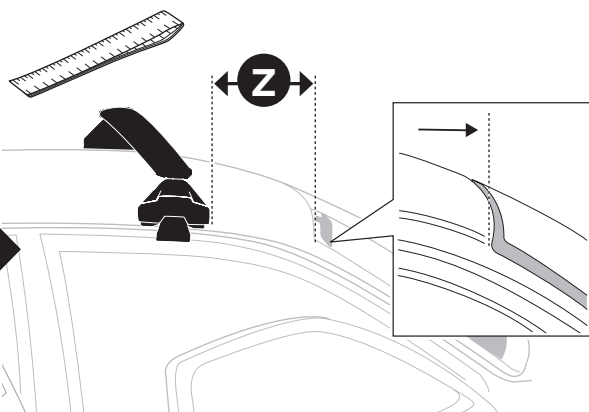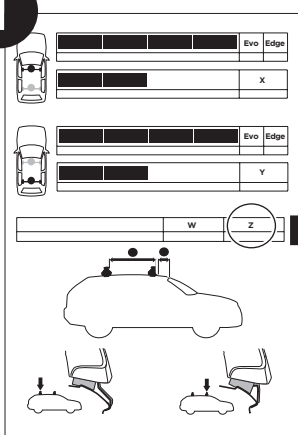

11

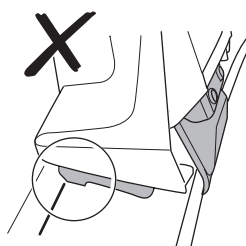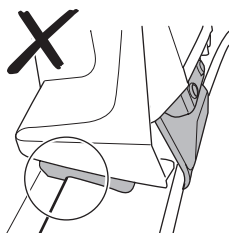
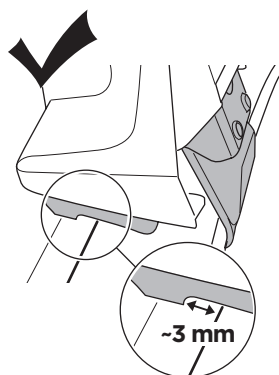
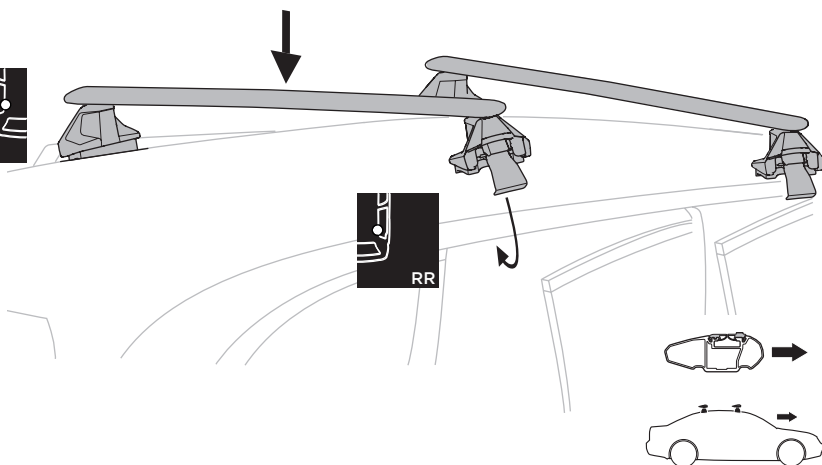


1

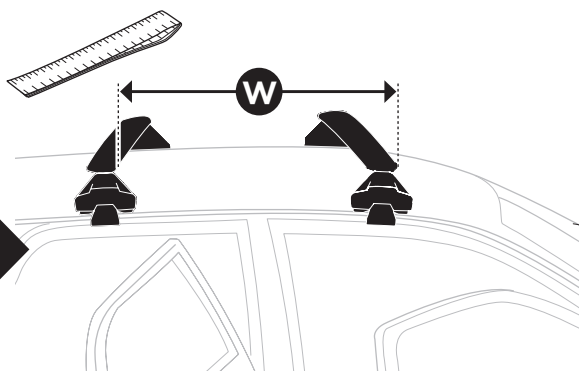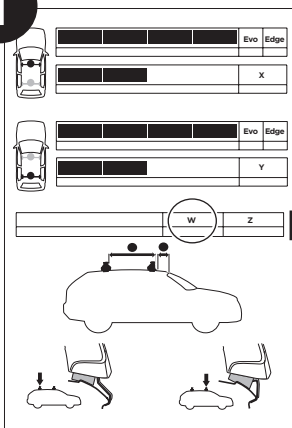

12



~50%

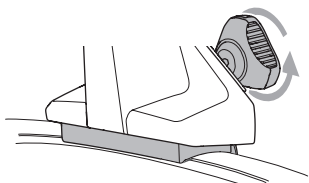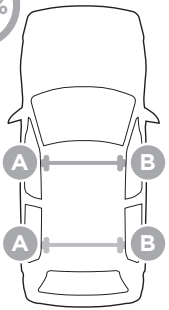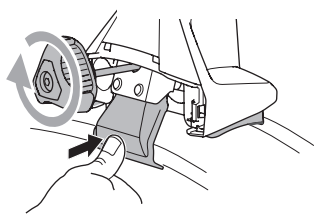

100%


Click
Click

3 Nm

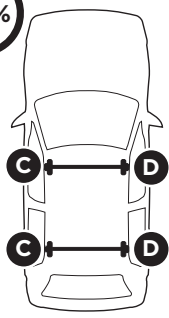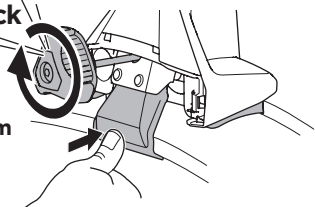


Click
Click


3 Nm

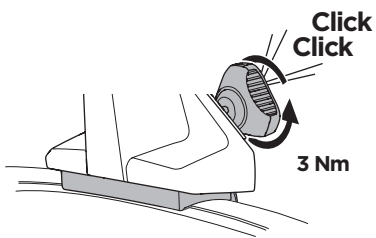



100%

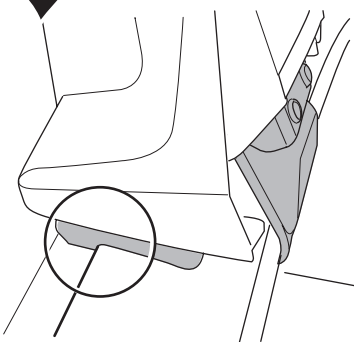




1

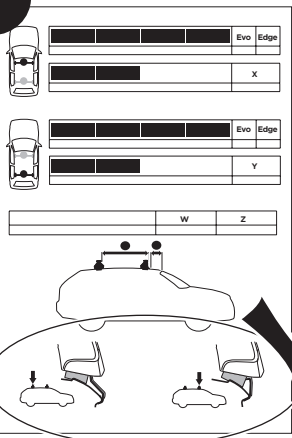




13

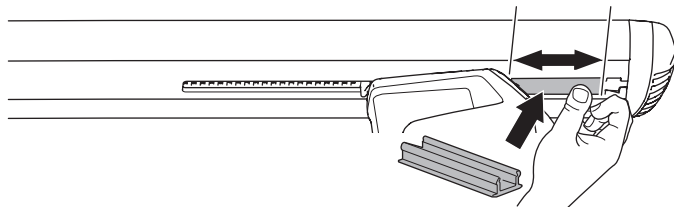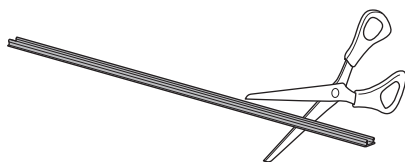

x4


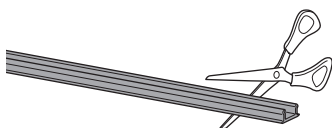
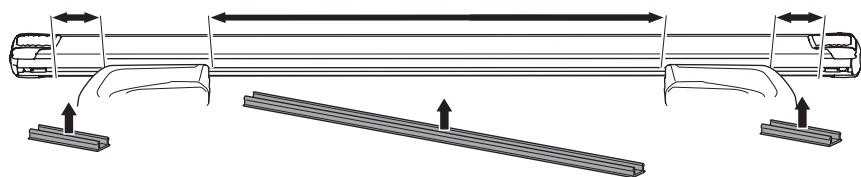


x2

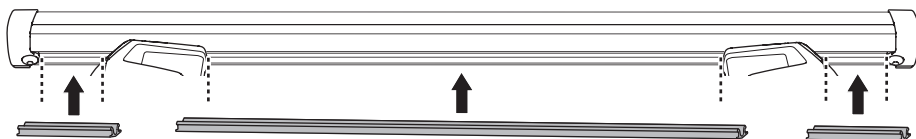


x2

14

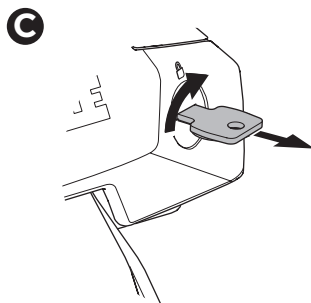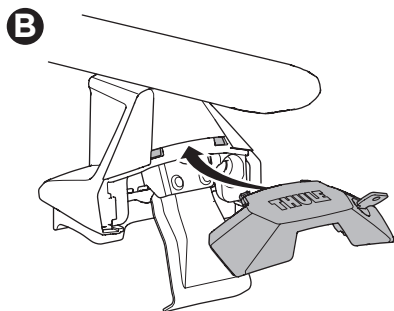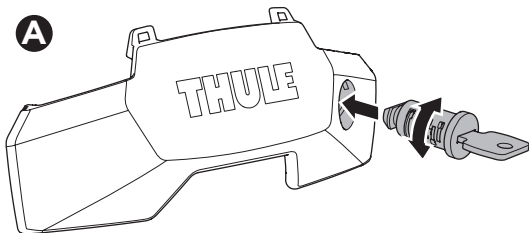


x4

15

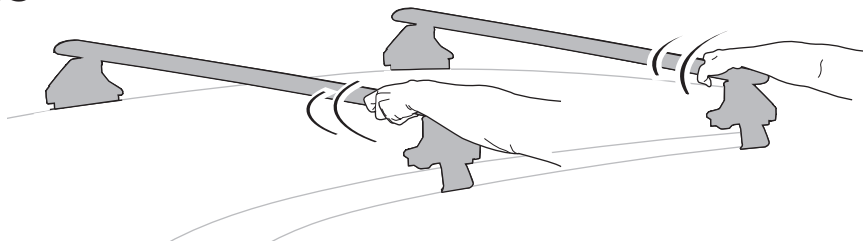


50 km



500 km

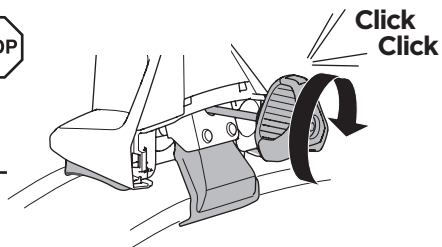


i

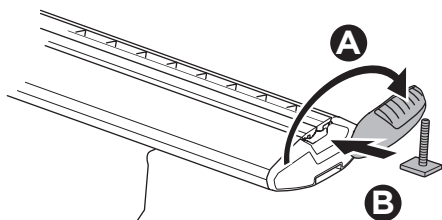



THULE
WingBar Evo

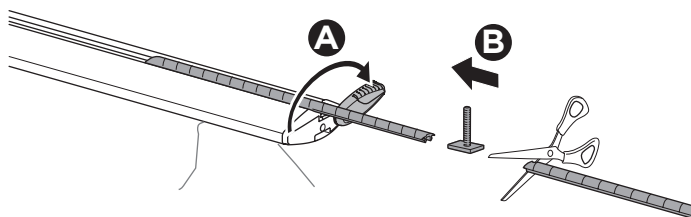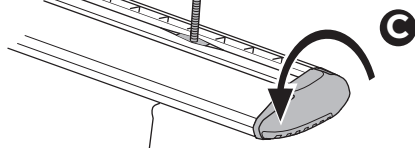

THULE
WingBar

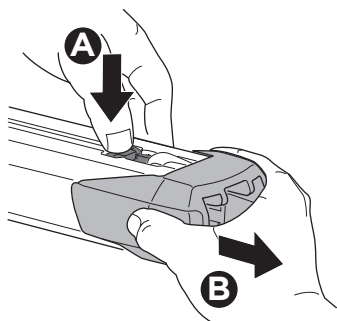

THULE
SlideBar Evo

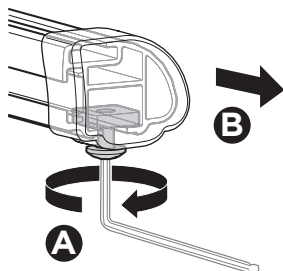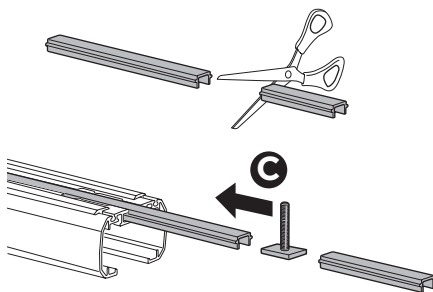

THULE
ProBar Evo

